



Cat. No. 63-917

Digital Rotary Timer

Your RadioShack Digital Rotary Timer is a compact timepiece that you can use just about anywhere. When the timer reaches the alarm time you set, it sounds a beep.

2. Place the battery in the compartment as indicated by the polarity symbols (+ and -) marked inside. The timer beeps once.

 
 
INSTALLING A BATTERY

Your timer requires one AAA battery (not supplied). For the best performance and longest life, we recommend RadioShack alkaline batteries.

Caution: Use only fresh batteries of the required size and recommended type.

Follow these steps to install the battery.

1. Press up on the battery compartment's tab, then lift the compartment door up and away.

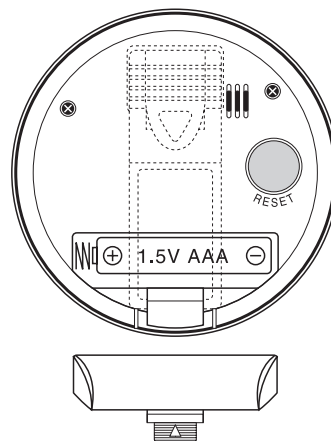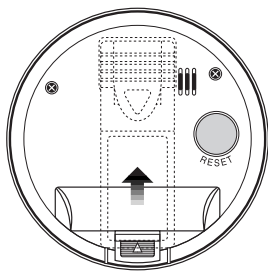

3. Replace the battery compartment cover.

When the display dims or the timer stops operating properly, replace the battery.

Warning: Dispose of an old battery promptly and properly. Do not burn or bury it.

Caution: If you do not plan to use the timer for more than a month, remove the battery. A battery can leak chemicals that can destroy electronic parts.

 
© 1999 Tandy Corporation.
All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

MOUNTING THE TIMER


On a Table

Pull the clip outward, and slightly tilt the timer until the metal support clip falls into place, creating a stand. Then set the timer on any flat surface where you can easily view the display.

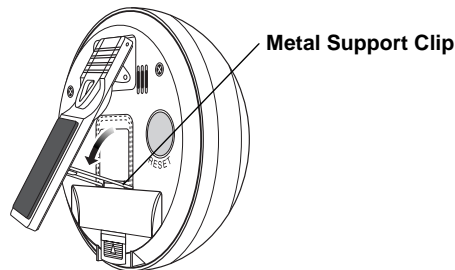

On a Wall

 Lift up the tab located at the top of the clip. Use the hole in the table to hang it on a wall.

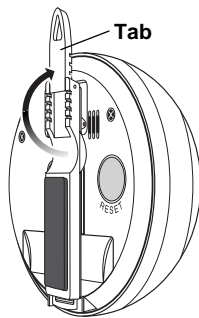

On a Metal Surface

Use the magnet located on the clip to secure the timer to a flat metal surface, like a refrigerator or metal cabinet.

Note: Avoid securing the timer to a moveable surface (such as a refrigerator's door). This kind of movement might cause the timer's switch to rotate and change your setting.

OPERATION

Using the Countdown Timer

1. Rotate the outer ring until the desired time appears on the display: clockwise toward + to increase the setting time; counterclockwise or toward - to decrease. You can set the timer up to 99 minutes and 90 seconds (100 minutes and 30 seconds).

Note: The display changes in 10-second increments. (The least you can set the timer for is 10 seconds.) You can also advance the timer setting in increments of 1 minute by rotating the dial quickly – about a half turn of the dial in one movement.

2. Press **START/STOP**. The timer beeps once and starts to count down.

Note: The timer beeps once each time you press **START/STOP**.

3. To temporarily stop the timer, press **START/STOP**. Press **START/STOP** again to re-start counting.
4. When the timer finishes counting down the time you set, it beeps for 1 minute, and begins counting up from **00:00** on the display until you press **START/STOP**.

Note: Though the alarm stops after 1 minute, the timer continues to count up to **99:99** until you press **START/STOP**.

5. To stop the alarm and the display, press **START/STOP**. The display returns to the setting you set in Step 1, so you can repeat the same count-down.
6. To clear the setting, press **RESET** on the back of the timer.

Using as Count-Up Timer

You can use your timer to count-up time. Set the timer setting to **00:00** and press **START/STOP**. The timer can count up to 99 minutes 99 seconds (i.e. 100 minutes 39 seconds). When the count reaches 99 minutes 99 seconds, the display stops and **99:99** flashes on the display.

Note: If the timer's display ever shows unrecognizable characters, remove the battery. Wait about 15 seconds, then reinsert the battery.

CARE

To enjoy your RadioShack Digital Rotary Timer for a long time:

- Keep the timer dry. If it gets wet, wipe it dry immediately.
- Use and store the timer only in normal temperature environments.

- Handle the timer gently and carefully. Don't drop it.
- Keep the timer away from dust and dirt.
- Wipe the timer with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the timer's internal components can cause a malfunction and invalidate its warranty. If your timer is not performing as it should, take it to your local RadioShack store for assistance.

SPECIFICATIONS

| | |
|-----------------------------|---|
| Operating Temperature | 32° F – 109° F (0° C – 43° C) |
| Power Source | 1.5V DC (one AAA battery) |
| Battery Life | About 1 year (Sounding the alarm for one minute twice a day) |
| Dimensions | 3 × 3 × 1 1/2 inches |
| Weight | 2.3 oz |

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

04/99

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

08A99

Printed in China